

# *How To Check The Oil In Your Generator*

## *KOHLER 38KW TO 60KW*


- 1) Insert your generator key into the two black knobs on the front door of the generator and turn 90 degrees to unlock unit.



- 2) Once unlocked tilt the door towards you and lift up to detach. Once removed from the unit lay aside in safe place so that you can now proceed with checking the oil.



- 3) Turn off the power breaker (as shown below), this will disconnect the power from the building and cause the lights to shut off but the generator will continue to run.
- 4) On the generator controller, select the “OFF” button, this will shut the generator engine off.
- 5) Let the oil settle for a minute, then locate the dipstick and check the oil level.
- 6) If oil is needed, unscrew the oil fill cover.
- 7) Add oil in small increments (you do not want to overfill the generator) and fill to the “FULL” mark on the dipstick as needed. (Oil type: 10W30 Synthetic)
- 8) Replace dipstick and the oil cover.
- 9) On the generator controller, select the “AUTO” button (located next to the “OFF” button) - this will cause the generator to start once again.
- 10) Wait 10 seconds and turn on the breaker - this will reconnect and power the building once again.
- 11) Replace and lock the generator door to its original place as when you first approached the generator.

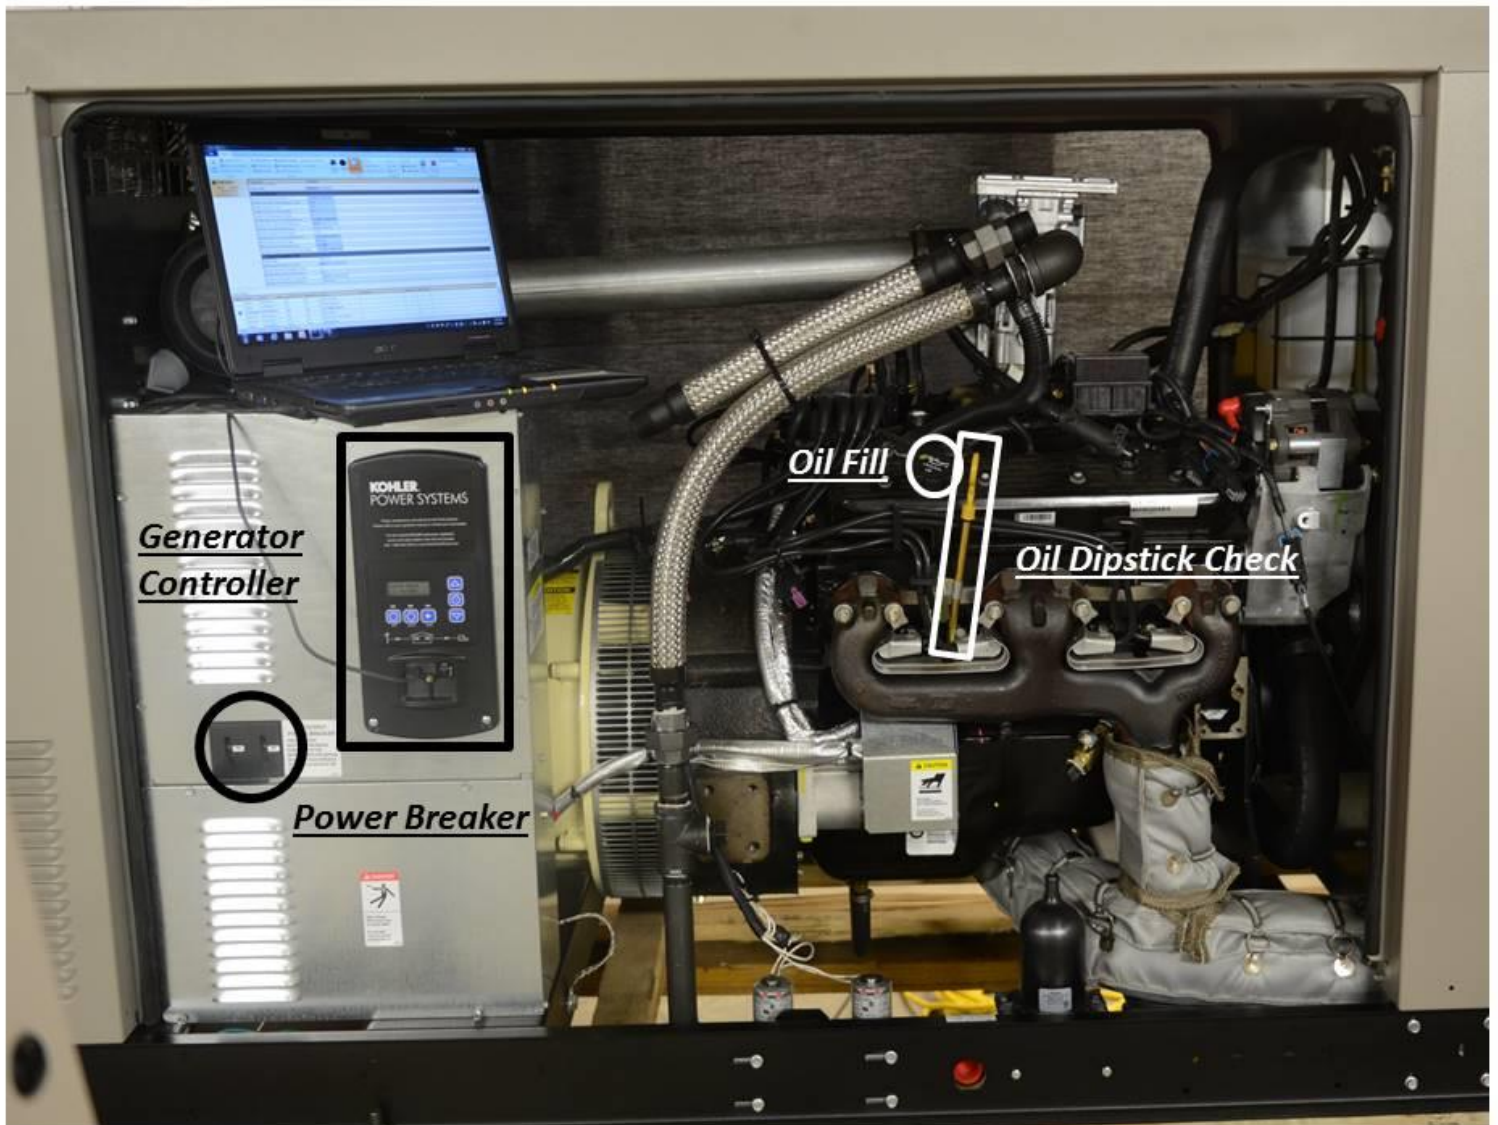

***Please don't hesitate to call the office with any questions  
781-294-8300 or 508-362-8304***